



Grain on fin is vertical.
Grain on rudder is perpendicular to joint.

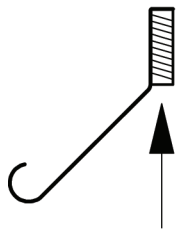


18 SWG tail skid. Bind to 3mm dowel with thread and glue into fuselage profile.

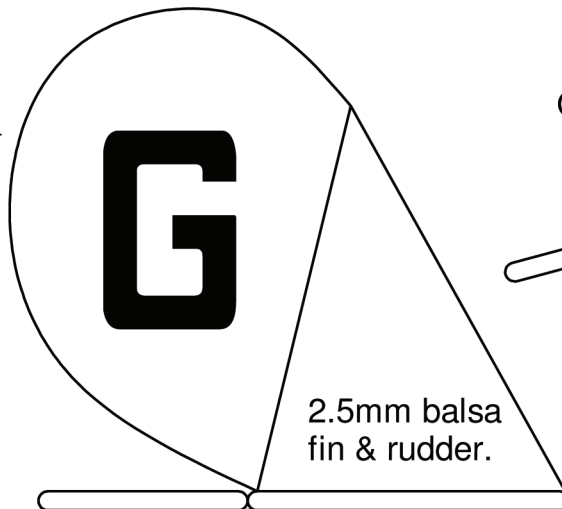


2.5mm balsa fin & rudder.

Offset rudder to outside of circle.

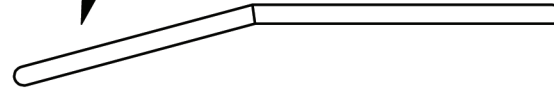

DC Bantam 0.75cc shown.
Integral tank turned 90 deg

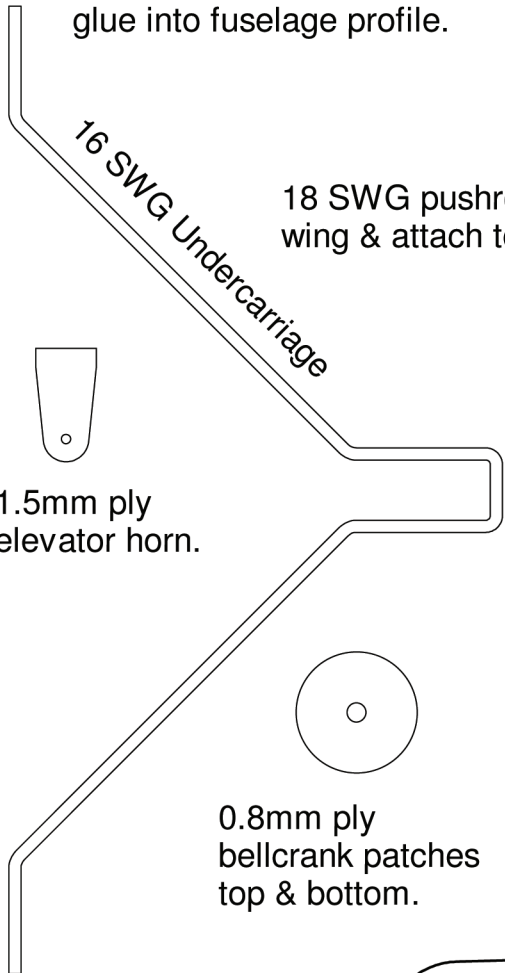

16 SWG Undercarriage


1.5mm ply elevator horn.

0.8mm ply bellcrank patches top & bottom.




18 SWG pushrod. Bend at wing & attach to bellcrank.

2.5mm balsa tailplane.

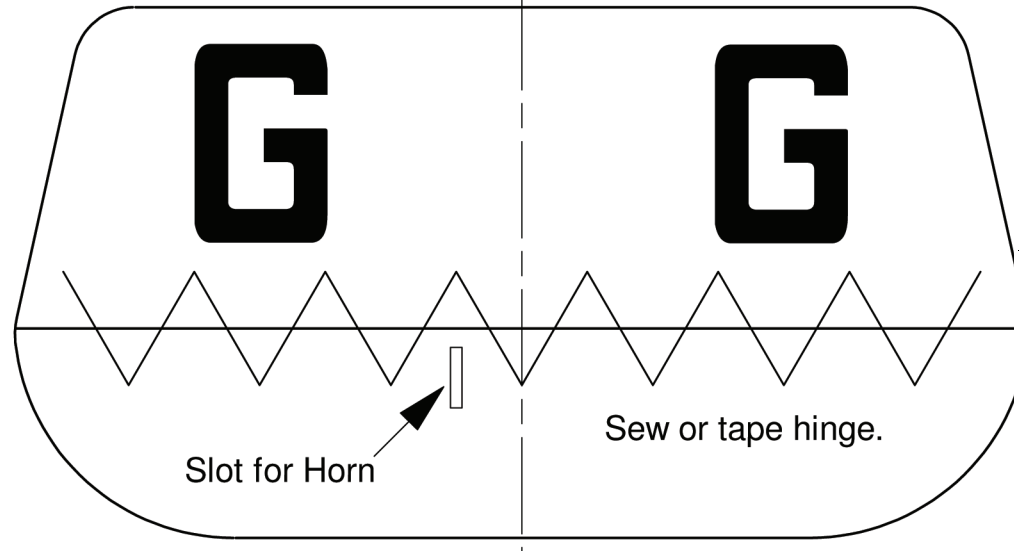


Slot for Horn

Sew or tape hinge.

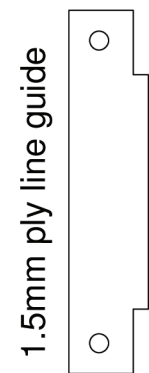

1.5mm ply line guide

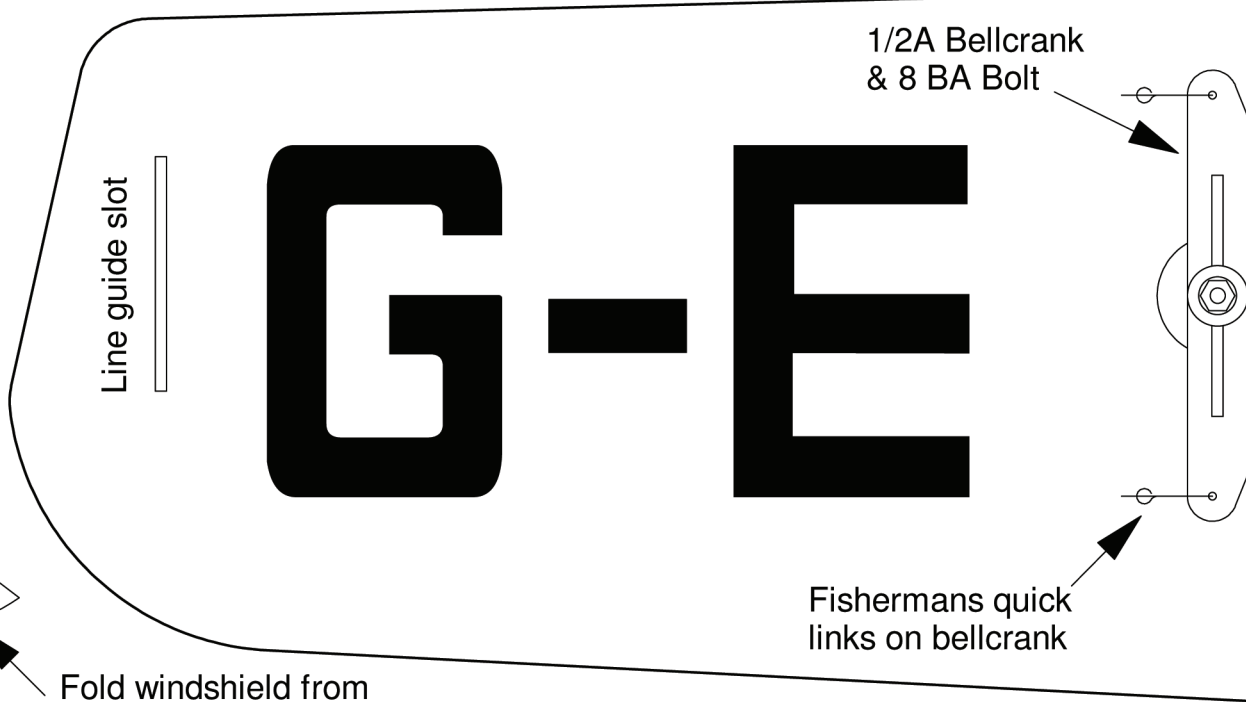

Line guide slot

1/2A Bellcrank & 8 BA Bolt

Fishermans quick links on bellcrank

Fold windshield from thin acetate